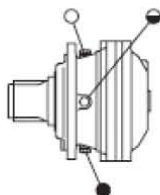
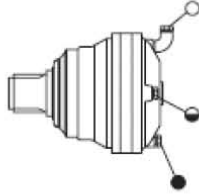
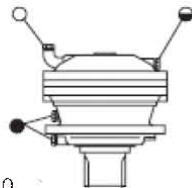
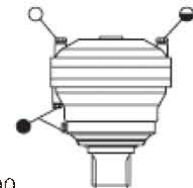
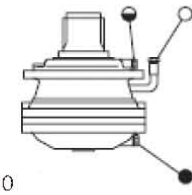
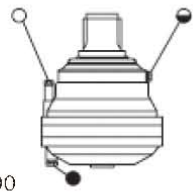
 
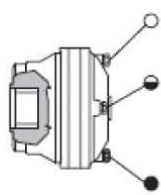
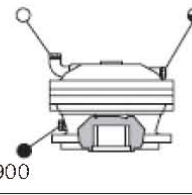
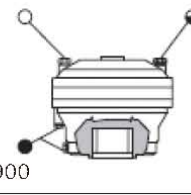
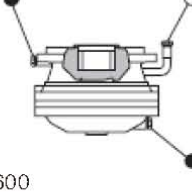
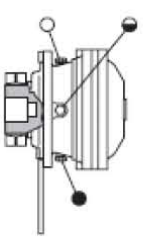
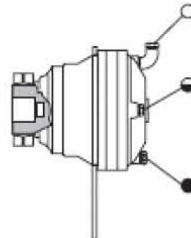
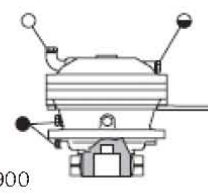
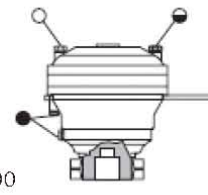
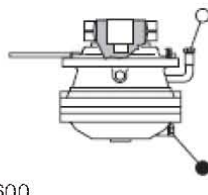
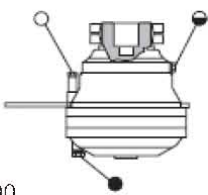


## 17. 安装位置 Mounting Positions

|            | 01-6                                                                                       | 7-8                                                                                        | 01-6                                                                                        | 7-8                                                                                          |
|------------|--------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| 输出轴<br>B、D | <br>500   | <br>500   | <br>900   | <br>900   |
|            |                                                                                            |                                                                                            | <br>600   | <br>600   |
| 输出轴<br>C   | <br>500 | <br>500 | <br>900  | <br>900  |
|            |                                                                                            |                                                                                            | <br>600 | <br>600 |
| 输出轴<br>A   | <br>500 | <br>500 | <br>900 | <br>900 |
|            |                                                                                            |                                                                                            | <br>600 | <br>600 |

● 放油螺塞 Drain plug

◐ 视油镜 oil level plug

○ 通气器 breather and filling plug